

**STEP 4:** Insert Weigh Safe sign into the sign holder, facing the front. See *Figure 4*.



Figure 4

**STEP 5:** Insert WS6-2 into the display unit and secure with hitch locking pin. Hang keys and clamshell on hooks, place the extra tow ball in the designated hole and fill the brochure holder. See *Figure 5*.



Figure 5

For further questions and/or assistance, please contact our Customer Support team via text/call at 801.820.7020 or via email at [spport@weigh-safe.com](mailto:spport@weigh-safe.com).



## WSPOP-CT Instruction Manual



[www.weigh-safe.com](http://www.weigh-safe.com)

## PARTS

PART	QTY
Base Plate	1
Vertical Tube	1
Brochure Holder	1
J-Style Hook	1
Single Loop Hook	1
Washers	2
Bolts	2
Weigh Safe Sign	1

## STEPS

**STEP 1:** Attach base plate to vertical tube with (2) washers and (2) bolts, making sure the sign holder is facing the front. Tighten. See *Figure 1*.



Figure 1

**STEP 2:** Insert both J-style hook and single loop hook into the designated holes on the vertical tube. See *Figure 2A & 2B*.

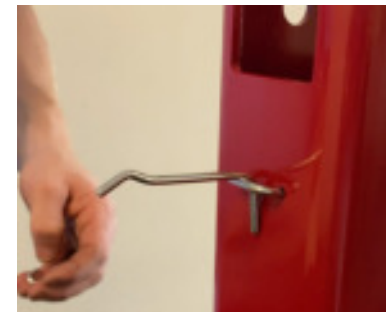


Figure 2A



Figure 2B

**STEP 3:** Remove plastic backing from brochure holder and attach to the base plate in front of the vertical tube. See *Figure 3*.



Figure 3